 


**DTC Troubleshooting: B1381****DTC B1381:**

Close Switch Signal Error

1. Clear the DTCs using the HDS.
2. Open the tailgate fully with the tailgate outer handle, then close it fully with manual operation.
3. Check the DTCs by selecting the DTCs MENU (DTCs) from the HDS.

 
*Is DTC B1381 indicated?***YES** - Go to [Step 4](#).**NO** - Intermittent failure, the system is OK at this time.■

4. Open the tailgate fully with the tailgate outer handle.
5. Cycle the ignition switch to OFF, and disconnect the 12P connector from the tailgate closer unit.
6. Check for continuity between the No. 5 and No. 9 terminals of the tailgate closer unit 12P connector.

*Is there continuity?***YES** - Faulty close switch; replace the tailgate closer unit.■**NO** - Go to [Step 7](#).

 
7. Reconnect the 12P connector to the tailgate closer unit.
8. Disconnect connector A (26P) from the power tailgate control unit.

9. Check for continuity between the No. 17 terminal of power tailgate control unit connector A (26P) and body ground.

*Is there continuity?***YES** - Go to [Step 15](#).**NO** - Go to [Step 10](#).

 
10. By using the screwdriver, close the latch in the tailgate.
11. Connect battery positive (+) terminal to the No. 26 terminal of power tailgate control unit connector A (26P), and connect negative (-) terminal to No. 13 terminal of one. Then, move the motor to closing direction less than one second.

12. Check for continuity between the No. 17 and No. 14 terminals of power tailgate control unit connector A (26P).

*Is there continuity?***YES** - Faulty power tailgate control unit; replace it.■**NO** - Go to [Step 13](#).

13. Disconnect the 12P connector from the tailgate closer unit.

14. Check for continuity between the No. 5 and No. 9 terminals of the tailgate closer unit 12P connector.

*Is there continuity?***YES** - Repair an open in the RED (CLCL) wire between the No. 17 terminal of power tailgate control unit connector A (26P) and No. 5 terminal of the tailgate closer unit 12P connector.■**NO** - Faulty close switch, or an open circuit for CLCL line in the tailgate closer unit; replace it.■

15. Disconnect the 12P connector from the tailgate closer unit.

16. Check for continuity between the No. 5 terminal of the tailgate closer unit 12P connector and body ground.

*Is there continuity?***YES** - Repair a short in the RED (CLCL) wire between the No. 17 terminal of power tailgate control unit connector A (26P) and the No. 5 terminal of the tailgate closer unit 12P connector.■**NO** - A short circuit for CLCL line in the tailgate closer unit; replace it.■